


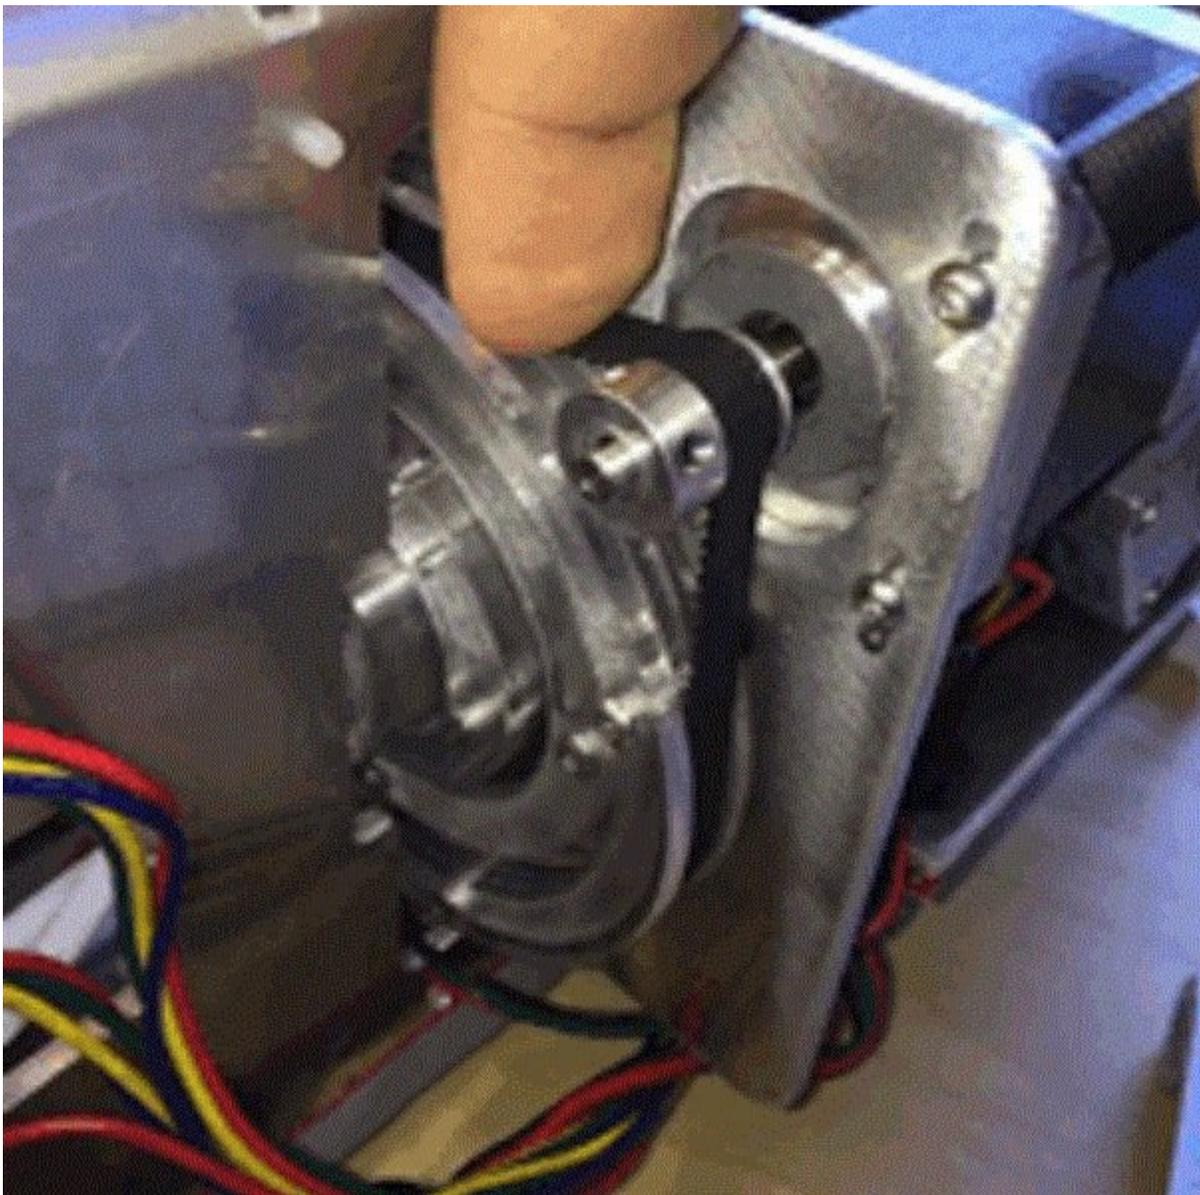

Adjusting Belt Tension

These instructions are for Palette owners who find that the tension on the belt is too loose or too tight.


Written By: Mosaic Support



 **TOOLS:**


- 2.0 mm Hex Key (1)
-

Step 1 — Access Cutter Motor

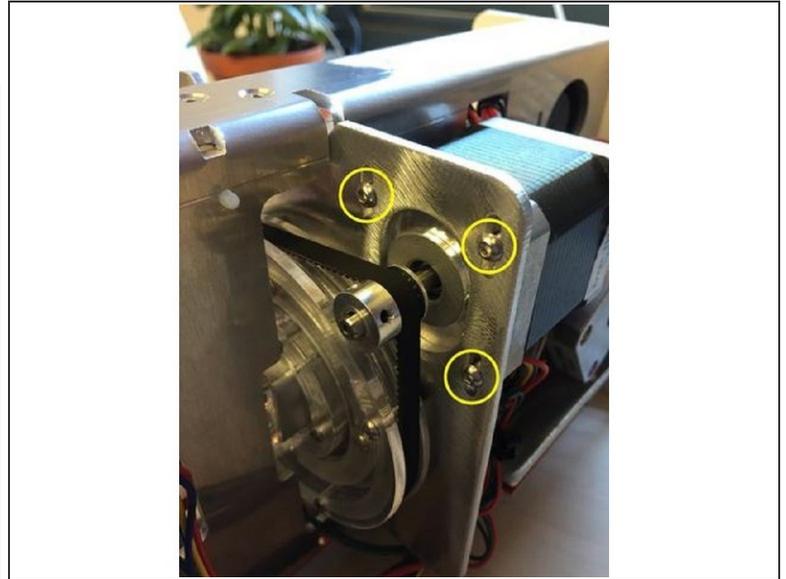

- Make sure Palette is not plugged into a computer or its power supply.
- Remove Palette's top by removing the four bolts holding on Palette's top.
- Use the 2.0 mm hex key (the smaller of the two hex keys in your Palette Tool Kit) to loosen, but not remove, the three bolts.

Step 2

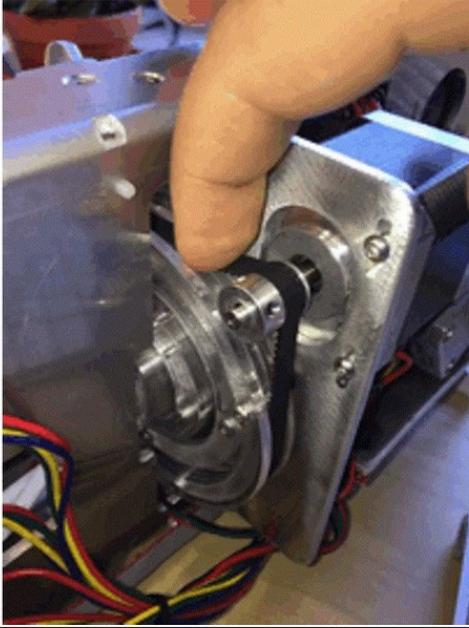

- Once the bolts are loosened, you are able to slide the motor along the tracks. You can slide the motor up to tighten the belt tension, or lower the motor to loosen the belt tension.
- Ensure that the belt is tight enough to turn the wheel, but also loose enough so that when you press down on the belt, there is some slack.
- Once you have the desired tension and motor height, tighten the bolts with the 2.0 mm hex key.

If you have any additional questions, please send us a message at support@mosaicmfg.com